

Service & Spares

Keys & Keyswitches

| | |
|-------------|---|
| 557.203.005 | Set of spare keys for MX Panel (AL102) |
| 557.180.209 | Keyswitch assembly for use with MX2 controllers (spare) |
| 557.180.208 | MX2 Spare Keys |
| 557.201.508 | MZX Spare Key Set |

Housings & Metalwork

| | |
|-------------|---|
| 557.201.300 | BFP801 Blank Half Module - Grey Overlay |
| 557.201.306 | Standard MX Expansion backbox and chassis plate |
| 557.201.310 | Deep MX Expansion backbox and chassis plate |
| 557.202.206 | MX2 expansion aperture installation kit |

CPU FIMs & Loop Cards

| | |
|-------------|--------------------------------|
| 557.202.000 | FIM801 1-Loop Field I/F Module |
| 557.202.001 | FIM802 2-Loop Field I/F Module |
| 557.202.008 | FIM801CV – T2000CV only |
| 557.202.007 | XLM800 2-Loop Expansion Card |
| 557.202.002 | CPU800 Central Processor Unit |
| 557.202.810 | CPU801 Central Processor Unit |

Power Supplies

| | |
|-------------|---|
| 557.202.003 | PSM800 Power Supply Unit |
| 557.202.004 | LBM800 Loop Booster Module PCB |
| 557.202.210 | PSU830 Power Supply with Loop Booster |
| 557.202.208 | MX2 8 Loop Expansion kit |
| 557.201.210 | Dual power supply mounting kit |
| 557.202.050 | PSM800 Temp Sensor Accessory Kit |
| 557.202.113 | PSB to FIM Cable |
| 557.202.608 | PMM800 Power monitor module |
| 557.202.609 | BAQ60T24 2.5A MZX PSU |
| 557.202.610 | BAQ140T24 5A MZX PSU |
| 557.202.611 | PMM805 Power Monitor Module - 5 V Repeater |
| 557.202.612 | PMM840 Power Monitor Module - 40 V Loop Power |

Indication & Expansion

| | |
|-------------|---|
| 557.202.013 | OCM800 Operator Control Module |
| 557.202.019 | ODM800 Operator Display Module |
| 557.202.021 | ANN840 40-Way Alarm/Fault LED Module |
| 557.202.022 | ANN880 80-Way Alarm LED Module |
| 557.202.020 | COM820 20-Way Status/Command Module |
| 557.202.200 | DCM800 MX2 Display Control Module (without LCD assy) |
| 557.202.601 | DCM816 16 zone display PCB for MZX125/MZX16R |
| 557.202.602 | DCM832 32 zone display PCB for MZX250/251/252 |
| 557.202.209 | MX2 LCD assembly |
| 557.202.028 | RSM800 Power Supply |
| 557.180.053 | Isolated RS485 IC (for U16) |
| 557.180.052 | Serial Printer Driver Kit |
| 557.202.613 | DCM864R Spare Display / Control PCB for MZX 253 (64 red zonal LEDs) |
| 557.202.614 | DCM8240 240 zone display PCB for MZX254 and MZXDR |

Callpoint Key & Glasses

| | |
|-------------|--------------------------------|
| 515.001.045 | MCP test key |
| 515.001.119 | MCP EN54 Spare Glasses pk of 5 |

MX Service Tool

| | |
|-------------|---|
| 516.800.922 | MX Service tool, Spare programming lead |
| 516.800.924 | MX Service tool, Spare pins for programming lead pk of 10 |

MX Loop Tester

| | |
|-------------|------------------------------------|
| 557.203.022 | MX Loop Tester ECM Prog Null Modem |
| 557.203.023 | MX Loop Tester Carry Bag |
| 557.203.024 | MX Loop tester PSU |
| 557.203.026 | MX Loop Tester Battery lead set |