
850 Series Generation 6 *MX* Detector Bases

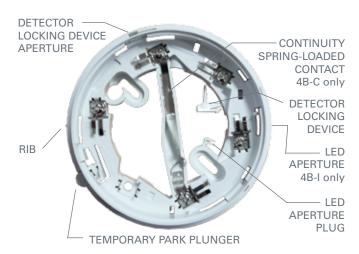

Features

- // Continuity, Isolator and Universal variants
- // Quick and easy to install
- // Compatible with 800, 814, and 850 Series detectors
- // Park position for testing
- // Optional detector locking device
- // Slim 4-inch profile
- // Snap-fit to Ceiling Tile Adaptor



4-Inch Base Options

The **4B-C Continuity base** is used for most installations involving 850 Series detectors, as it allows the detector's in-built short circuit isolation function to be in-circuit when the detector is fitted and ensures continuity is maintained when the detector is removed. The **4B-I Short Circuit Isolator base** is used to protect circuits that use devices that do not have built-in shortcircuit isolation. The **4B Universal base** is used when neither short circuit isolator nor continuity functionality is required. All 4-inch bases are compatible with the Ceiling Tile Adaptor that can potentially decrease installation time by up to 30%.



Specifications

Supply Voltage Supply Current Tripped Current Dimensions (H x Dia) Weight Material Colour

Ambient Temperature Storage Temperature Relative Humidity Indoor Applications Only

Part Numbers

517.050.041 517.050.042 517.050.043 517.050.051 517.050.052 517.050.056 for detector covers & 4B-C bases) -25°C to +70°C -40°C to +80°C 10% to 95% (non cond.) 4B Universal Base 4B-C Continuity Base 4B-I Isolator Base

4B Deckhead Mount

Euro Mount Adaptor

4B-6A 4" to 6" Adaptor

20 to 40Vdc MX Loop

Flame Retardant ABS

3.5mA (max. 4B-I)

25 x 109 mm

64a

80µA typ. (quiescent 4B-l)

White (optional Pantone colours

Fixing


The 4B detector bases are designed to snap-fit to the Ceiling Tile Adaptor. Alternatively they can be screw fixed to a ceiling, electrical box, or deckhead mount in the traditional manner. A park position allows the



detector to be mechanically attached to the base without making electrical connection to facilitate the testing of electronic-free bases.

The base should be fixed such that the park plunger faces toward the door or trafficable area. This ensures

the detector LED will be visible from the direction of entry, in accordance with AS1670.1-2004. With a detector mounted in the base, a raised rib on both the base and detector align when the detector is in the fully home position.

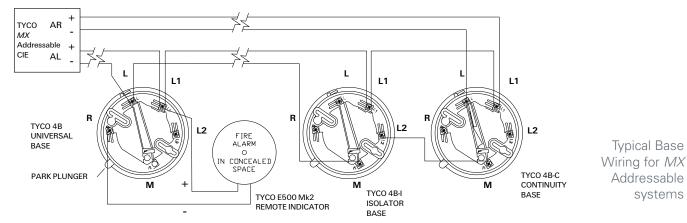

The MX CIE can be programmed to illuminate a Remote Indicator for detectors in alarm other than the detector base to which the Indicator is connected.

Wiring

Cables should be arranged at each side of the terminal screw. A maximum of two 1.5mm² cables or one 2.5mm² cable can be fitted to one terminal. Any additional cables (such as Remote Indicator) should be fitted with suitable fork or eyelet crimp terminal lugs. The installation should comply with AS 1670.1 or NZS 4512.

4B Loop Cabling	4B-I Loop Cabling	4B-C Loop Cabling
L (-In/Out) L1 (+In/Out).	L2 (-In) M (-Out) L1 (+In/Out).	L (-In) M (-Out) L1 (+In/Out).
A remote indicator may be	A remote indicator may be	A remote indicator may be
connected between loop positive	connected between loop positive	connected between loop positive
L1 (+In/Out) and terminal R (-ve).	L1 (+In/Out) and terminal R (-ve).	L1 (+In/Out) and terminal R (-ve).
Terminal L2 must not be used.	Terminal L must not be used.	Terminal L2 must not be used.

Detector Lock

The detector locking device is part of the base moulding. If required, it is detached and inserted into the locking aperture. A detector mounted in the base will now be locked in position. The detector can then be removed only after inserting an unlocking tool into the hole on the detector cover to depress the spring tab on the locking device. A 3mm rod could be a suitable unlocking tool; one can be fabricated by grinding a screwdriver with a 3mm diameter shaft to a length of 22mm.



Locking Device

LED Aperture Plug

Bases with an isolating function have an LED fitted. Bases without an isolator have an empty aperture, which may be filled using a plug detached from the base moulding.

Maintenance And Service

The Tyco *MX* addressable system should be maintained in accordance with the relevant parts of AS 1851 or NZS 4512. The Tyco X300 Smoke Tester, X461 Heat Tester and CO test gas (part no. 517.001.262) may be used for testing the detector in-situ. Rotating the detector anticlockwise past an indent to the park position disconnects the detector from the circuit whilst still retaining it in the base, allowing loop testing etc. Depressing the plunger at the side of the base allows the detector to be rotated back into its operating position.

Australia

Tyco Fire Protection ProductsLevel 3, 95 Coventry StreetSouthbank VIC 3006Tel: 1300 725 688Tel: +61 3 9313 9700Email: tfppcustservice.au@tycofp.com

New Zealand Tyco Fire Protection Products 17 Mary Muller Drive Hillsborough PO Box 19-545 Woolston Christchurch 8241 Tel : +64 9 635 0760 Email : tsp.sales.nz@tycoint.com

Copyright © 2015 Tyco Australia Pty Limited. All rights reserved. Tyco reserves the right to make changes to any aspect of this publication at any time without notice. VIGILANT is a trademark of Tyco New Zealand Limited or its affiliates; TYCO is a trademark of Tyco International Services GmbH.

