

## EQ48, EQ72, EQ96 and EQ144

## Voltmeters and Ammeters Moving iron







### **DATA SHEET**



# **Voltmeters and Ammeters, Moving iron (type EQ)**

Document no.: 4921210163D


- 90° pointer deflection
- Standard DIN sizes
- Quadratic instruments Q48, Q72, Q96, Q144
- Accuracy class 1.5
- Exchangeable scale




#### Application

Moving-iron instruments are intended for installation in panels of power distribution or wherever AC current or AC voltages are to be measured.

The EQ measures R.M.S. values in frequency range 16 to 65 Hz (possible calibration for other frequency ranges).

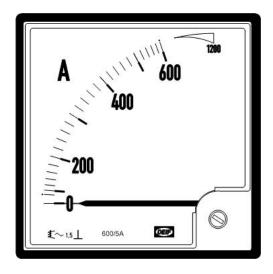



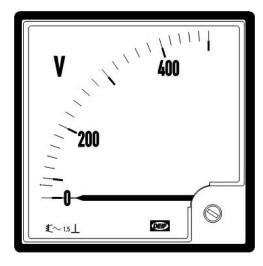

Example standard EQ96, 0-500 V

#### Available variants

#### Standard variants

Standard variants have fixed measuring ranges and scales. Neither customisation nor options are possible.

#### **Custom variants**

If you require ranges or scale designs outside our standard program, then you must select a custom variant. Custom variants will be customised on customer request.

DEIF A/S Page 2 of 8

#### Standard variants

#### AC voltmeters - direct measurement

Range:	EQ48	EQ72	EQ96	EQ144
0-40 V	Х	Х	Х	Х
0-60 V	Х	Х	Х	Х
0-100 V	Х	Х	Х	Х
0-110 V	Х	Х	Х	Х
0-150 V	Х	Х	Х	Х
0-250 V	Х	Х	Х	Х
0-300 V	Х	Х	Х	Х
0-400 V	Х	Х	Х	Х
0-500 V	Х	Х	Х	Х
0-600 V		Х	Х	Х

AC ammeters -/1 A CT (2 times overload)

Range:	EQ48	EQ72	EQ96	EQ144
0-10 A	Х	Х	Х	Х
0-15 A	Х	Х	Х	Х
0-25 A	Х	Х	Х	Х
0-40 A	Х	Х	Х	Х
0-50 A	Х	Х	Х	х
0-100 A	Х	Х	Х	Х
0-150 A	Х	Х	Х	Х
0-200 A	Х	Х	Х	Х
0-250 A	Х	Х	Х	х
0-300 A	Х	Х	Х	Х
0-400 A	Х	Х	Х	х
0-500 A	Х	Х	Х	х
0-600 A	Х	Х	Х	х
0-800 A	Х	Х	Х	х
0-1000 A	Х	Х	х	х
0-2000 A	Х	Х	Х	Х

## AC ammeters – direct measurement (2 times overload)

Range:	EQ48	EQ72	EQ96	EQ144
0-1 A	Х	Х	Х	Х
0-1.5 A	Х	Х	Х	Х
0-2.5 A	Х	Х	Х	Х
0-4 A	Х	Х	Х	Х
0-5 A	Х	Х	Х	Х
0-6 A	Х	Х	Х	Х
0-10 A	Х	Х	Х	Х
0-15 A	Х	Х	Х	Х
0-25 A	Х	Х	Х	Х
0-40 A	Х	Х	Х	Х
0-60 A		Х	Х	Х

AC ammeters -/5 A CT (2 times overload)


Range:	EQ48	EQ72	EQ96	EQ144
0-10 A	х	Х	Х	Х
0-15 A	х	Х	Х	Х
0-25 A	Х	Х	Х	Х
0-40 A	х	Х	Х	Х
0-50 A	Х	Х	Х	Х
0-100 A	Х	Х	Х	Х
0-150 A	х	Х	Х	Х
0-200 A	х	Х	Х	Х
0-250 A	Х	Х	Х	Х
0-300 A	х	Х	Х	Х
0-400 A	Х	Х	Х	Х
0-500 A	Х	Х	Х	Х
0-600 A	х	Х	Х	Х
0-800 A	х	Х	Х	Х
0-1000 A	х	Х	Х	Х
0-2000 A	Х	Х	Х	Х

DEIF A/S Page 3 of 8

#### **Custom variants**

	Anti-glare glass			
	Glass with red adjustable pointer (IP52 only)			
Options	IP54 protection including sealing and rubber gasket			
	Calibration certificate			
	Specific mounting angle			
	Optional graphics			
	- Coloured lines (red, green, yellow)			
	- Coloured section (red, yellow, green)			
Scale design	- Coloured figures (red, green, yellow)			
	- Application text (black, red, green, yellow)			
	- Ammeters' overload range: 3, 4, 5 or 6 times overload			
	New scale design			
	Non-standard voltage measuring range (within data sheet limits)			
Measurement	Adjusted for DC measurement for moving iron instrument			
wieasurement	Adjusted to specific frequency voltage input only (100 to 500 Hz)			

#### Adjustable red pointer

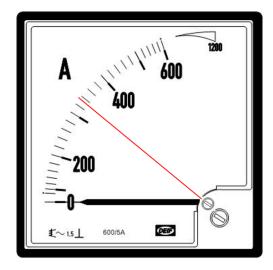

Example: standard EQ96, 0-600/5 A (CT) user-adjustable pointer. This pointer limits the front protection to IP52.

#### **Optional IP54 protection**

This includes special sealing of the housing and a fitting gasket. The gasket itself is not enough to secure IP54 protection.

IP54 protection includes sealing and rubber gasket.


DEIF A/S Page 4 of 8

#### Scale design

#### **Optional graphics**

A scale design is made with the following elements:

- 1. Logo
- Symbols
  Measurer Measurement type
- 4. Measurement area and overload
- Graphic elements (extra text, coloured marking)
- Other graphical elements (red line)

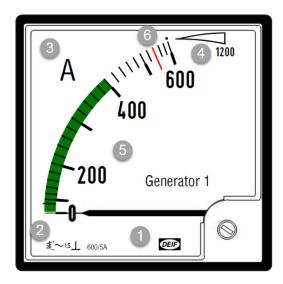

#### New scale design

Typically, this is for customers who needs their own specific scale design or/and a design that differentiates from the DIN standard. The design is stored in the DEIF database and ensures that orders can easily be repeated.

#### Separate scales

As the scales are user-changeable, separate scales can be ordered separately if needed.

#### Technical specifications

EQ					Standards
Type:	EQ48	EQ72	EQ96	EQ144	
Measuring	Up to 300 V AC (500 A AC <sup>1</sup> )				
voltage:	Stand	dard ranges: up to 600	V (see standard varian	ts)	
	Fo				
Burden:		DIN 43700			
	Up to 40 A AC				
Measuring current:	Direct m				
	For current				
Burden:		Approx.: 0.5	to 1.2 VA		
Frequency range:	16-65 Hz.	Calibration for other fr	equency ranges (see o	ptions)	
Overload:	Continuous:	EN60051-2			
A aguragu		EN 60051			
Accuracy:	Linear scale: ±1.5 %	of full scale (FS)	Non-linear scale: ±1.	5 % of scale length	EN 60051


<sup>1:</sup> Safety: Cat. III 300 V AC/Cat. II 600 V AC

DEIF A/S Page 5 of 8


Instruments ar	Standards					
Cizon	Q48	Q72	Q96	Q144		
Sizes:	48 x 48 mm	72 x 72 mm	96 x 96 mm	144 x 144 mm	DIN 43700	
Scale length -x :	41 mm	62 mm	92 mm	135 mm		
Bezels	Slim bezels				DIN 43718	
Scale/pointer			Standard po	pinter	DIN 43802	
	Standard:		Vertical (90	±5°)		
Mounting angle	Other angles:		Specify angl	e to horizontal		
		╗	⊥ vertical mo	ounting		
	$ \sqrt{\Box}$	$\equiv /$	∠ <sub>60°</sub> 60° (e.g.)			
	1	70				
	For edgewise instruments only, furthermore specify: Horizontal or vertical scale					
Measuring ranges	Others on reque	st.			DIN 43701	
Protection	Standard	d version	IP54 v	ersion*	*) Marked with label:	
	From front	From rear	From front	From rear	"IP54 from front only when rubber gasket is	
(Housings)	IP52	IP52	IP54	IP52	mounted"	
	Quadratic	Edgewise	Quadratic	Edgewise		
(Terminals)	IP20	IP00	IP20	IP00	EN 60529	
Climate	Max. 95 % RH: Max. 85 % RH: Max. 75 % RH:	Remaining days Average per yea	r year		DIN 40040	
Temperature	-10 to 55°C (nor -25 to 60°C (ope -25 to 65°C (sto	erating)			EN 60051	
Panel influence	thickness of the	panel	by the material n	or by the	EN 60051	
Shock test	15 g - 6 times - 3 50 g/6 ms 22 g/20 ms	3 directions			IEC 68-2-27, Test: Ea	
Vibrations		3 mm 1 g			GL + LR: Test 1 DNV: Class A	
Materials	All plastic mater		guishing		UL94 (V0)	
Safety	For detailed info Pollution deg. 2		EN 61010-1			
EMC			mercial and light	industry plus	EN 61000-6-3/4 EN 61000-6-1/2	

DEIF A/S Page 6 of 8

#### Dimensional details

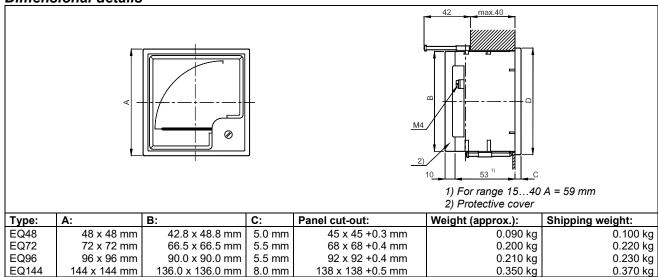

#### Exchange of scale

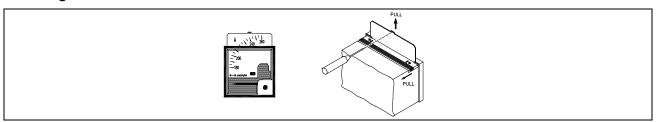

- 1) Press cover at top of instrument as shown.
- 2) Remove scale by means of a suitable tool (for example a screwdriver).
- 3) After exchange of scale: refit cover (press till it snaps into place). Calibration is not needed.

Note: Interrupt signal to terminals before exchanging the scale.

#### Available variants

Item no.	Variant no.	Variant description
2961111420	07	EQ144-x (90°). Standard voltage and current input including standard scale.
2961111420	08	EQ144-x (90°). Customised voltage and current input including scale.
2961110420	07	EQ48-x (90°). Current /1A or /5A CT without scale.
2961110420	08	EQ48-x (90°). Standard voltage and current input including standard scale.
2961110420	09	EQ48-x (90°). Customised voltage and current input including scale.
2961110720	07	EQ72-x (90°). Current /1A or /5A CT without scale.
2961110720	08	EQ72-x (90°). Standard voltage and current input including standard scale.
2961110720	09	EQ72-x (90°). Customised voltage and current input including scale.
2961110920	07	EQ96-x (90°). Current /1A or /5A CT without scale.
2961110920	08	EQ96-x (90°). Standard voltage and current input including standard scale.
2961110920	09	EQ96-x (90°). Customised voltage and current input including scale.

DEIF A/S Page 7 of 8

#### Order specifications

#### Variants:

Mandatory infor	Additional options to the standard variant						
Item no.	Туре	Variant no.	Measuring range	Scale	VT primary/secondary	Option	Option

#### Example:

Mandatory infor	Additional options to the standard variant						
_		Variant Measurir no. Type no. range		Scale	VT primary/secondary	Option	Option
2961110420-08	EQ48-x	08	0 to 400 V	0 to 400 V AC			
				0 to 500 A AC			Antiglare
2961110920-09	EQ96-x	09	CT 500/5 A	(x2)		IP54	glass
2961110920-09	EQ96-x	09	(Determined by DEIF)	0 to 12 kV AC	11 kV/120 V AC	Red line at 10.5 kV	

Note: When ordering an EQ meter for connection via a voltage transformer (VT), both primary and secondary of the VT must be stated as shown above.

#### **Disclaimer**

DEIF A/S reserves the right to change any of the contents of this document without prior notice. The English version of this document always contains the most recent and up-to-date information about the product. DEIF does not take responsibility for the accuracy of translations, and translations might not be updated at the same time as the English document. If there is a discrepancy, the English version prevails.



DEIF A/S, Frisenborgvej 33 DK-7800 Skive, Denmark

**®** 

Tel.: +45 9614 9614, Fax: +45 9614 9615 E-mail: deif@deif.com, URL: www.deif.com

	 •	-	-	

Due to our continuous development we reserve the right to supply equipment which may vary from the described.

DEIF A/S Page 8 of 8